



Ref. No.	Part No.	Description	Quantity
11	16-011	Locking Lever	2
12	16-029	Locking Lever	1
13	16-004	Locking Knob	2
14	16-003	Stop Collar	2
15	16-013	Magnet	1
16	16-074	Hex Wrench Set (5)	1
17	16-037	Round Angular Pad	1
18	16-038	Round Angular Pad Bushing	1
19	16-036	Round Angular Pad Screw	1
20	16-039	Flat Right Angle Pad	1
21	16-040	Flat Angular Pad Screw	1
22	16-070	Front Clamp Bar	1
23	16-010	Front Clamp OperatingScrew	1
24	16-072	Front Clamp Head	1
25	16-071	Front Clamp Head Screw	2

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTION
Nail is not driven	No nails in the nail path	Load nails
	Nails placed backwards in the nail path	Remove and reload strip of nails
	Using the wrong compensator	Use the proper compensator
	A jammed nail obstructs nail feeding	Remove nails and the jam
	Follower spring not pushing strip of Nails into position	Replace follower spring Remove obstruction in nail path Verify Follower Spring is attached
	Wrong compensator or not installed correctly	Replace compensator or insert it properly
	The last 1/4 of the strip of nails will not feed	Add more nails
	Edge of hammer is worn or damaged	Contact Customer Service (see below)
Nail only partially driven in moulding	Upper clamp set too high above the frame	Position upper clamp 3/8" to 5/8" above moulding
	Edge of hammer is worn or damaged	Contact Customer Service (see below)
	Upper clamp pad out of position	Re-position the upper clamp

FOR ASSISTANCE, CONTACT THE FLETCHER-TERRY COMPANY CUSTOMER SERVICE DEPARTMENT AT 800.843.3826 (U.S./CANADA) OR 860.677.7331, [customerservice@fletcher-terry.com](mailto:customerservice@fletcher-terry.com).

## SPARE PARTS

Ref. No.	Part No.	Description	Quantity
1	16-043	Pusher (7mm)	1
2	16-044	Pusher (10mm/12mm/15mm)	1
3	16-023	Nail Block	1
4	16-022	Follower Spring	1
5	16-020	Hammer	1
6	16-027	Follower	1
7	16-024	Nail Path Guide	1
8	16-041	7mm Compensator	1
9	16-042	10mm Compensator	1
10	16-025	Nail Path Guide Screw	2

